SDM630-M

Smart Three Phase Energy Meter



USER MANUAL

2025 V1.01

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

Statements

All rights reserved. Without the written permission of the company, no paragraphs or chapters in this manual can be extracted, copied or reproduced in any form. Otherwise, the violator shall bear all consequences.

Eastron reserves all legal rights.

Eastron reserves the right to amend the product specifications in this manual without prior notice. Before placing an order, please contact our company or local agent to get the latest specifications.

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

CONTENT

Version History **1**

Risk Information **2**

Chapter 1. Introduction **4**

1.1 Product Introduction 4

1.2 Product Characteristics 4

Chapter 2. Technical Parameters **5**

2.1 Technical Parameters 5

2.2 Mechanical Characteristics 5

2.3 Performance Criteria 5

2.4 Electromagnetic Compatibility 5

2.5 Safety 6

2.6 Accuracy 6

2.7 Outputs 6

2.8 Dimensions 7

2.9 Wiring Diagram 8

Chapter 3. Operation **10**

3.1 Installation Display 10

3.2 Button Functions 10

3.3 Measurements 11

3.4 Auxiliary Mode 14

3.5 Setup Mode 16

Chapter 4. Declaration of Conformity (For MID meter only) **18**

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

Version History

Version	Date	Changes
1.00	2025-2-28	Initial issue
1.01	2025-11-19	Add dimensional tolerance information

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

Risk Information

Information for Your Own Safety

This manual does not contain all of the safety measures operating the equipment (module, device) for different conditions and requirements. However, it does contain information which you must know for your own safety and to avoid damages. These information are highlighted by a warning triangle indicating the degree of potential danger.



Warning

This means that failure to observe the instruction can result in death, serious injury or considerable material damage.



Caution

This means hazard of electric shock and failure to take the necessary safety precautions will result in death, serious injury or considerable material damage.

Qualified personnel

Operation of the equipment (module, device) described in this manual may only be performed by qualified personnel. Qualified personnel in this manual means person who are authorized to commission, start up, ground and label devices, systems and circuits according to safety and Regulatory standards.

Proper handling

The prerequisites for perfect, reliable operation of the product are proper transport, proper storage, installation and proper operation and maintenance. When operating electrical equipment, parts of this equipment automatically carry dangerous voltages. Improper handling can therefore result in serious injuries or material damage.

- ✧ Use only insulating tools.
- ✧ Do not connect while circuit is live (hot).
- ✧ Place the meter only in dry surroundings.
- ✧ Do not mount the meter in an explosive area or expose the meter to dust, mildew and insects.
- ✧ Make sure the wires are suitable for the maximum current of this meter.
- ✧ Make sure the AC wires are connected correctly before activating the current/voltage to the meter.
- ✧ Do not touch the meter connecting clamps directly with metal, blank wire and your bare hands as you may get electrical shock.
- ✧ Make sure the protection cover is placed after installation.
- ✧ Installation, maintenance and reparation should only be done by qualified personnel.
- ✧ Never break the seals and open the front cover as this might influence the function of the meter, and will cause no warranty.
- ✧ Do not drop, or allow strong physical impact on the meter as the high precisely components inside may be damaged.
- ✧ Designed to be mounted inside of switchboards or cabinet on DIN rail.
- ✧ This device must have a suitable sized Circuit Breaker feeding the Multi Function Energy Meter so it

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

does not exceed the maximum rated current.

- ✧ The supply wiring of this device shall be suitable sized cable to match the installed circuit breaker.
- ✧ A Disconnection Device (Circuit Breaker) should be installed close to the Multi Function Energy Meter.
- ✧ The Disconnection Device shall be marked as the Disconnection Device for the Multi Function Energy Meter.

Disclaimer

We have checked the contents of this publication and every effort has been made to ensure that the descriptions are as accurate as possible.

However, deviations from the description cannot be completely ruled out, so that no liability can be accepted for any errors contained in the information given. The data in this manual is checked regularly and the necessary corrections are included in subsequent editions. We are grateful for any improvements that you suggest.

2025 EASTRON ELECTRONIC. ALL RIGHTS RESERVED.

Chapter 1. Introduction

1.1 Product Introduction

SDM630-M is Eastron's new-greneration three-phase smart energy meter.
The meter measures and displays the characteristics of single phase two wire (1p2w), three phase three wire (3p3w) and three phase four wire (3p4w) supplies, including voltage, frequency, current, power, active and reactive energy, imported or exported. Energy is measured in terms of kWh, kVArh. Maximum demand current can be measured over preset periods of up to 60 minutes.

These units are Max. 100A direct connected and do not need to connect with external current transformers(CT).
An RS485 communication port is available on the meters for remote data transmission.

1.2 Product Characteristics

- Bi-directional measurement IMP & EXP
- RS485 Modbus RTU
- Multi-parameters measurement
- LCD with white backlit, adjustable backlit time

Measurements:

- Phase voltage: V1, V2, V3
- Line voltage: V1-2, V2-3, V3-1
- Current: I1, I2, I3, IN
- Active power: P1, P2, P3, P_total (total active power)
- Reactive power: Q1, Q2, Q3, Q_total (total reactive power)
- Apparent power: S1, S2, S3, S_Total (total apparent power)
- Frequency: Hz
- Power factor: PF
- Active energy: Ep_imp (import active energy), Ep_exp (export active energy), Ep_total (total active energy)
- Reactive energy: Eq_imp (import reactive energy), Eq_exp (export reactive energy), Eq_total (total reactive energy)
- THD-I and THD-U
- Maximum demand: MD

Setup:

- Modbus parameters
- Demand interval time
- Backlit time
- Supply system 1p2w, 3p3w,3p4w
- Clear Max. demand info
- Password modification

Chapter 2. Technical Parameters

2.1 Technical Parameters

Voltage AC (Un)	3*230/400V AC
Voltage Range	100 - 277V AC (L-N)
Voltage Between Phase	100 to 480V AC (L-L)
Current Input	0.3-10(100)A
Starting Current (Ist)	0.04A
Transition Current (Itr)	1A
Over Current Withstand	30Imax for 0.01S
Frequency Rating Value	50/60Hz
AC Voltage Withstand	4KV/1min
Impulse Voltage Withstand	6kV – 1.2/50μS waveform
Voltage Circuit Power Consumption	≤ 2W/10VA
Current Circuit Power Consumption	≤0.05VA
Display	LCD with white backlit
Max. reading	999999.99 kWh/kVArh

2.2 Mechanical Characteristics

Weight	≈325g
IP Degree of Protection (IEC 60529)	IP51 front display IP20 whole meter
Dimensions (DxHxW)	66*100*72mm
Mounting	DIN Rail 35mm
Material of Meter Case	Self-extinguishing UL 94 V-0
Mechanical Environment	M1

2.3 Performance Criteria

Operation Humidity	≤90% Non-condensing
Storage Humidity	≤95% Non-condensing
Operating Temperature	-40℃~+70℃
Storage Temperature	-40℃~+80℃
Pollution Degree	2
Altitude	≤2000m
Vibration	10Hz to 50Hz, IEC 60068-2-6

2.4 Electromagnetic Compatibility

Electrostatic Discharge	IEC 61000-4-2
Immunity to Radiated Fields	IEC 61000-4-3
Immunity to Fast Transients	IEC 61000-4-4
Immunity to Impulse Waves	IEC 61000-4-5
Conducted Immunity	IEC 61000-4-6
Immunity to Magnetic Fields	IEC 61000-4-8
Immunity to Voltage Dips	IEC 61000-4-11

Radiated Emissions	EN55032 Class B
Conducted Emissions	EN55032 Class B

2.5 Safety

Over-voltage Category	CAT III
Installation Category	CAT III
Insulating Encased Meter of Protective Class	II

2.6 Accuracy

Parameters	Accuracy	Resolution
Voltage	±0.5%	0.1V
Current	±0.5%	0.001A
Frequency	±0.2%	0.01Hz
Power Factor	±0.01	0.001
Active Power	±1%	0.001kW
Reactive Power	±1%	0.001kVAr
Apparent Power	±1%	0.001kVA
Active Energy	Class 1 or 0.5 IEC62053-21 Class B or C EN50470-3:2022	0.01kWh
Reactive Energy	Class 2 IEC 62053-23	0.01kVArh

2.7 Outputs

2.7.1 RS485 Modbus RTU

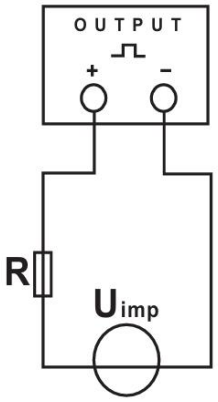
For Modbus RTU, the following RS485 communication parameters can be configured from the Set-up menu:

Bus Type	RS485
Communication Protocol	Modbus RTU
Baud Rate	2.4k/4.8k/9.6k(default)/19.2k /38.4k bps
Address Range	001 to 247
Max. Bus Load	64 PCS
Communication Distance	1000m
Parity Bit	none(default)/ odd / even
Stop Bit	1 or 2
Data Bits	8

2.7.2 Pulse output

The meter is equipped with pulse outputs, which are fully isolated from the inside circuit. They generate pulses in proportion to the measured energy. The pulse output is polarity dependent, passive transistor output requiring an external voltage source for correct operation. For this external voltage source, the voltage shall be 5-27V DC, and the maximum input current shall be 27mA DC.

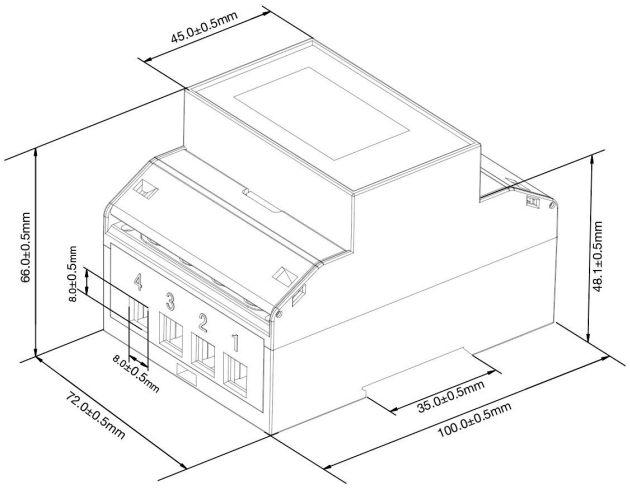
:



ATTENTION: Pulse output must be fed as shown
in the wiring diagram on the left.
Scrupulously respect polarities and the connection mode.
Opto-coupler with potential-free SPST-NO Contact.
Contact range 5~27VDC
Max. current Input: 27mA DC

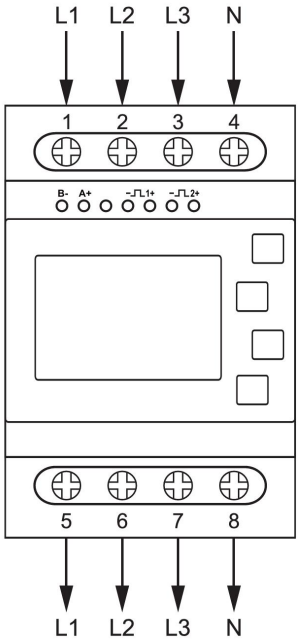
Pulse outputs type	Two independent channels of optocoupler passive pulse outputs	
Pulse output 1 (configurable)	Type	kWh/kVArh (total, imported, exported) Default: export kWh
	Constant	dFt, 0.01, 0.1, 1, 10, 100 kWh/kVArh per imp Default: dFt = 0.0025 kWh/imp
	Width	200, 100, 60mS Default: 100mS
Pulse output 2 (fixed)	Type	Total kWh
	Constant	400imp/kWh
	Width	100mS

2.8 Dimensions

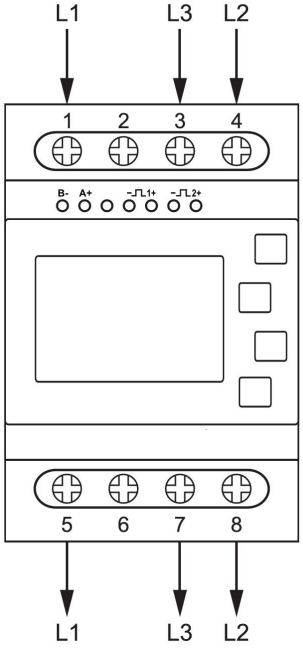


Height: 100mm
Width: 72mm
Depth: 66mm

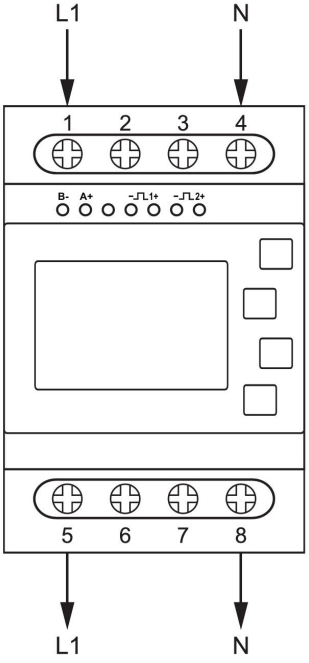
2.9 Wiring Diagram



3P4W



3P3W



1P2W(L+N)

Wiring Guide

Terminal ①~⑧	Measurement Connection	Screw Connection
	Strip Length	12-13mm
	Screw	M5
	Rigid/Supple	4-25mm² (11~4AWG)
	Tightening Torque	3.5Nm
	Model	PH2
Terminal 	Measurement Connection	Screw Connection
	Strip Length	6-7mm
	Screw	M2.5
	Rigid/Supple	0.5-1.5mm² (22 ~ 14AWG)
	Tightening Torque	0.4Nm
	Model	PH0

Chapter 3. Operation

3.1 Installation Display

	The first screen lights up all display segments and can be used as a display check.
	The second screen show software version.
	The third screen show program number.
	The interface performs a self-test and indicates the result if the test passes.

3.2 Button Functions

Button	Short click		Long press (3s)	
	Display mode	Setup mode	Display mode	Setup mode
	V1 V2 V3 V1-2 V2-3 V3-1 I1 I2 I3 IN V %THD I %THD	Return to previous menu		
	Hz PF PF1 PF2 PF3 MD of I1 I2 I3 MD of Power	Previous page or increase value	Address Baud rate Parity bit Stop bit Software version CRC All display segments	

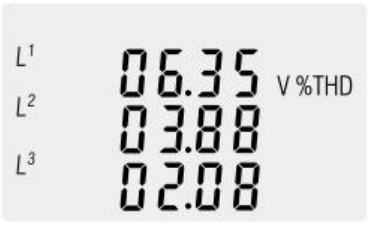
	P1 P2 P3 Q1 Q2 Q3 S1 S2 S3 P-t Q-t S-t	Next page or decrease value		
	Active E-t Reactive E-t Imp Active E Exp Active E Imp Reactive E Exp Reactive E CO2	Move to right side	Enter setup mode	Confirm setting

3.3 Measurements

3.3.1 Voltage and current

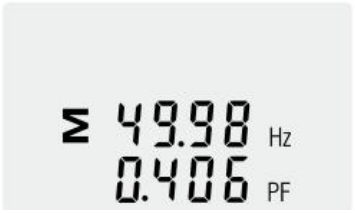
Each successive pressing of the  button selects a new range:

	Phase to neutral voltage (Not available under 3P3W)
	Phase to phase voltage (Not available under 1P2W)
	Current of each phase
	Neutral current (Not available under 3P3W &1P2W)

	Phase to neutral voltage THD% (Phase to phase voltage THD% under 3P3W)
	Phase current THD%

3.3.2 Frequency, Power factor and Demand

Each successive pressing of the  button selects a new range:

	Frequency and Power Factor (total)
	Power Factor of each phase (Not available under 3P3W &1P2W)
	Maximum current demand of each phase
	Maximum total power demand

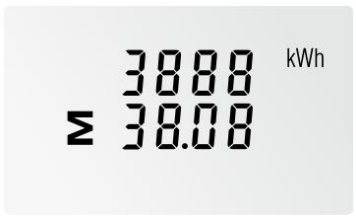
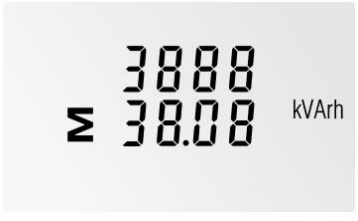
3.3.3 Power

Each successive pressing of the P button select a new range:

	Instantaneous Active Power in kW (Not available under 3P3W &1P2W)
	Instantaneous Reactive Power in kVAr (Not available under 3P3W &1P2W)
	Instantaneous Volt-amps in kVA (Not available under 3P3W &1P2W)
	Total kW, kVAr, kVA

3.3.4 Energy

Each successive pressing of the E button shows following measurements:

	Total active energy in kWh
	Total reactive energy in kVArh

	Imported active energy in kWh
	Exported active energy in kWh
	Imported reactive energy in kVArh
	Exported reactive energy in kVArh
	Carbon emissions (kg)

3.4 Auxiliary Mode

Each successive Long pressing of the  button enter the auxiliary and each successive pressing of the  button select a new range:

	Address
	Baud rate
	Parity bit
	Stop bit
	Software version
	CRC
	All display segments

3.5 Setup Mode

The meter's settable parameters are password protected. Each successive Long pressing on the E button to enter setup mode. Some menu items, such as password and CT, require a four-digit number entry while others, such as supply system, require selection from a number of menu options.

3.5.1 Menu Option Selection

1.Use the M and P buttons to scroll through the different options of the set up menu.

2.Long press E to confirm your selection.

3.If an item flashes, then it can be adjusted by the M and P buttons.

4.Having selected an option from the current layer, long press E to confirm your selection.

5.Having completed a parameter setting, press U/I to return to a higher menu level.

You will be able to use the M and P buttons for further menu selection.

6.On completion of all setting-up, press U/I repeatedly until the measurement screen is restored.

3.5.2 Number Entry Procedure

When setting up the unit, some screens require the entering of a number. In particular,
on entry to the setting up section, a password must be entered. Digits are set individually, from left to right.

The procedure is as follows：

1.The current digit to be set flashes and is set using the M and P buttons.

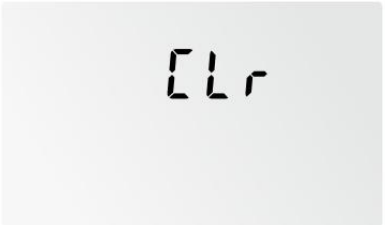
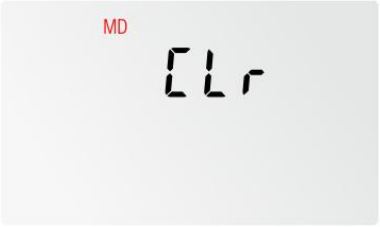
2.Short press E to confirm the digit setting and remove to the next.

3.After setting the last digit, long press E to confirm the setting.

4.Press U/I to return to a higher menu level.

Settings interface	Set status	Optional configuration
		**Password** Default: 1000
		**Address setting** Range: 001~247 Default: 001

		**Baud rate setting** Option: 2.4k, 4.8k, 9.6k, 19.2k, 38.4k bps Default: 9.6k bps
		**Parity bit setting** Option: EVEN, ODD, NONE Default: NONE
		**Stop bit setting** Option: 1, 2 Default: 1
		**Pulse output setting** Option: kWh or kVArh, import, export or total. Default: export kWh
		**Pulse rate setting** Option:dFt, 0.01, 0.1, 1, 10, 100 kWh/kVArh per imp Default: dFt = 0.0025 kWh/kVArh per imp
		**Pulse duration setting** Option: 200, 100, 60mS Default: 100mS
		**Demand interval time setting** Option: 0, 5, 8, 10, 15, 20, 30, 60min Default: 60min

		**Backlit time setting** Option: on, off, 5, 10, 30, 60, 120min Default: 60min
		**System type setting** Option: 3P4W, 3P3W, 1P2W Default: 3P4W
		**CO2 rAte setting** Range: 00.0000~60.0000kg/kWh Default: 0.5703kg/kWh
		**CLR Max. demand setting**
		**Password setting** Range: 0000~9999 Default: 1000

Chapter 4. Declaration of Conformity (For MID meter only)

We, Zhejiang Eastron Electronic Co., Ltd. declares under our sole responsibility as the manufacturer that the three phase multi-function electrical energy meter SDM630-M correspond to the production model described in the EU-type examination certificate and the requirements of the Directive 2014/32/EU.
Type examination certificate number 0120/SGS0703.
Identification number of the Notified Body: 0598.

If you have any question, please feel free to contact our sales team.

Eastron Electronic Co., Ltd.
No. 52, Dongjin Road, Nanhu, Jiaxing, Zhejiang, China
Tel: +86-573-83698881 Fax: +86-573-83698883
Email: sales@eastrongroup.com
www.eastrongroup.com